

30,000 Miles (48 000 km) or at 24 months

- Change engine oil.
- Replace engine oil filter.
- Replace air cleaner filter.**
- Replace spark plugs.**
- Inspect drive belt, adjust tension as necessary.
- Lubricate steering linkage.
- Drain and refill automatic transmission fluid.
- Drain and refill transfer case fluid.
- Lubricate steering and suspension ball joints.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

37,500 Miles (60 000 km) or at 3

- Change engine oil.
- Replace engine oil filter.
- Lubricate steering linkage (4x4 only)
- Drain and refill manual transmission

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE

45,000 Miles (72 000 km) or at 3

- Change engine oil.
- Replace engine oil filter.
- Lubricate steering linkage.
- Inspect brake linings.
- Flush and replace engine coolant regardless of mileage.
- Lubricate steering and suspension b

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE