

8W-44 INTERIOR LIGHTING

Component	Page	Component	Page
A/C Heater Control	8W-44-12	Glove Box Lamp	8W-44-2
Ash Receiver Lamp	8W-44-11, 12	Headlamp Switch	8W-44-11
Automatic Day/Night Mirror	8W-44-6	Instrument Cluster	8W-44-11
Automatic Temperature Control Module	8W-44-12	Junction Block	8W-44-2, 3, 4, 5, 6, 7, 8, 9, 10
Back-Up Lamp Switch	8W-44-7	Key-In Switch/Halo Lamp	8W-44-2
Body Control Module	8W-44-2, 5, 9, 11, 12, 13	Left Courtesy Lamp	8W-44-2, 9
Cargo Lamp	8W-44-5	Left Visor/Vanity Lamp	8W-44-5
Cigar Lighter Lamp	8W-44-12	Liftgate Ajar Switch	8W-44-13
Cigar Lighter/Power Outlet	8W-44-12	Liftglass Ajar Switch	8W-44-13
Circuit Breaker 2	8W-44-10	Mercury Switch	8W-44-2
Courtesy Lamp Relay	8W-44-2, 3, 4, 5, 9	Overhead Console	8W-44-4
Dome/Reading Lamp	8W-44-3	Park/Neutral Position Switch	8W-44-8
Driver Door Courtesy Lamp	8W-44-10	Passenger Door Courtesy Lamp	8W-44-10
Driver Door Module	8W-44-10	Passenger Door Module	8W-44-10
Driver Front Door Ajar Switch	8W-44-13	Passenger Front Door Ajar Switch	8W-44-13
Driver Outside Power Mirror	8W-44-6	Passenger Rear Door Ajar Switch	8W-44-13
Driver Rear Door Ajar Switch	8W-44-13	Powertrain Control Module	8W-44-8
Floor Console Lamps	8W-44-11	Radio	8W-44-9
Fuse 6 (JB)	8W-44-6	Right Courtesy Lamp	8W-44-2, 9
Fuse 16 (JB)	8W-44-2, 3, 4, 5, 9	Right Visor/Vanity Lamp	8W-44-5
G107	8W-44-2	Switch Pod	8W-44-11
G109	8W-44-2	Underhood Lamp	8W-44-2
G300	8W-44-13	Universal Garage Door Opener	8W-44-5
G301	8W-44-10	Vehicle Information Center/ Graphic Display Module	8W-44-12
G302	8W-44-10, 11		
G303	8W-44-2, 7, 8, 9, 11, 12		























