

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

CONNECTOR NAME/ NUMBER	COLOR	LOCATION	FIG.
Transmission Control Module C2 (Diesel)	BK	Right Rear Side of Engine Compartment	13
Transmission Solenoid (4.0L Gas)	BK	Left Side of Transmission	17
Transmission Solenoid Assembly (Diesel)	BK	On Transmission	13
Transmission Solenoid/TRS Assembly (4.7L)	GY	Left Side of Transmission	21
Underhood Lamp	BK	At Lamp	8
Vehicle Information Center	BK	In Overhead Console	N/S
Viscous/Cabin Heater (Diesel)	BK	Right Front of Engine Above Generator	13
Washer Fluid Level Switch	GY	Left Front of Engine Compartment	4, 5
Wastegate Solenoid (Diesel)		Near Power Distribution Center	7, 10
Water In Fuel Sensor (Diesel)	BK	Left Rear of Engine Compartment	N/S

GROUNDS

GROUND NUMBER	LOCATION	FIG.
G100 (4.0L and Diesel)	Near Starter	N/S
G100 (4.7L)	Near Intake Plenum	N/S
G101	Near Battery	3
G102	Right Side of Engine	19, 20
G103	Right Side of Engine	9, 13, 15, 16, 19, 20
G104 (4.0L)	Right Rear of Engine	15, 16
G104 (4.7L)	Left Side of Engine	18
G105	Right Side of Engine	13
G106	Left Side of Engine Compartment	4, 5
G107	Left Side of Engine Compartment	4, 5
G108	Near Power Distribution Center	6, 7
G200	Near Airbag Control Module	24, 27, 28, 29
G201	Near Airbag Control Module	24, 27, 28, 29
G300	Near Right Front Seat	42, 44
G301	Near Left Front Seat	41, 43